



## ASSEMBLY INSTRUCTIONS INSTRUCCIONES DE MONTAJE / INSTRUCTIONS DE MONTAGE


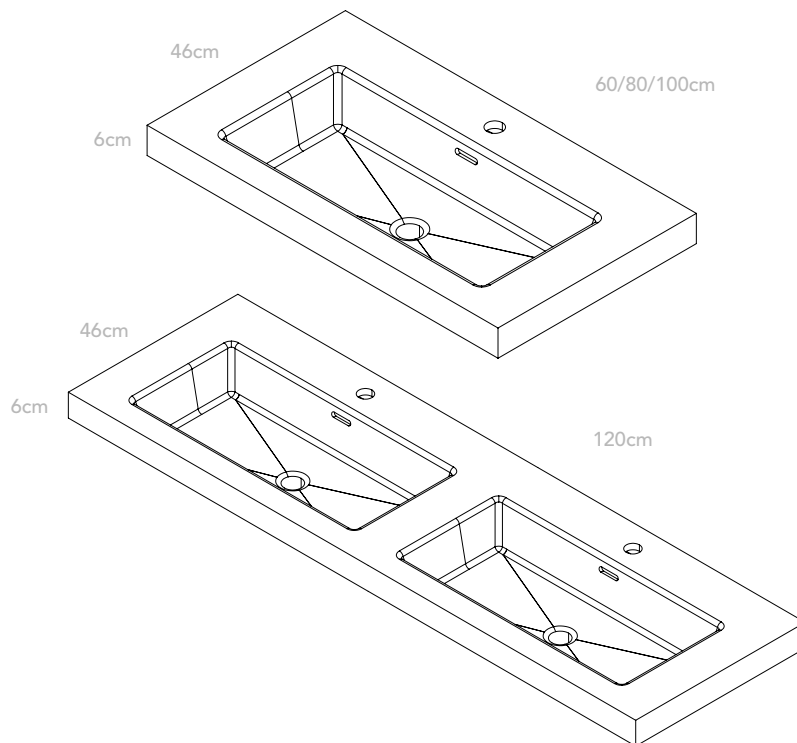


## 1. Installation Drawing / Cotas de instalación / Dimensions d'installation

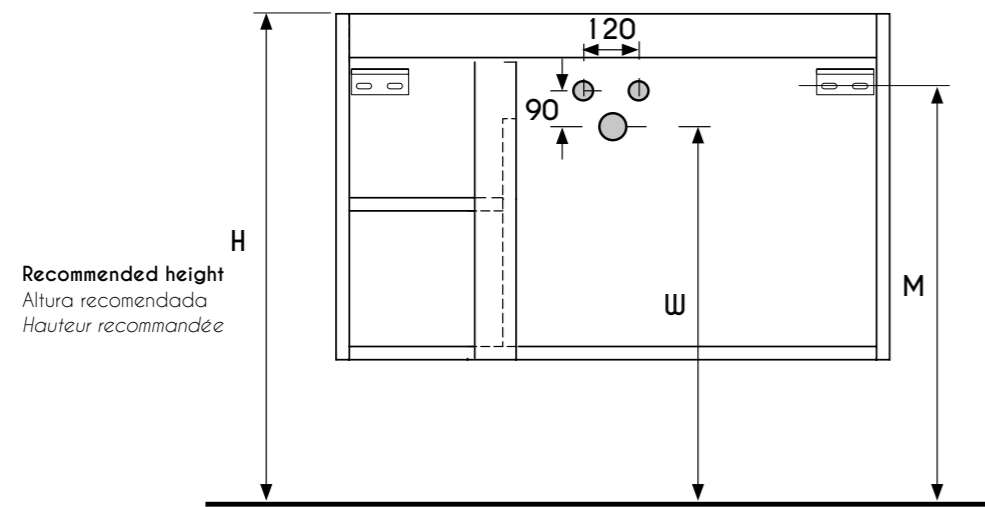

	H	M	W
	860	740	660
	860	740	660
	815	695	640
	845	725	645


mm.

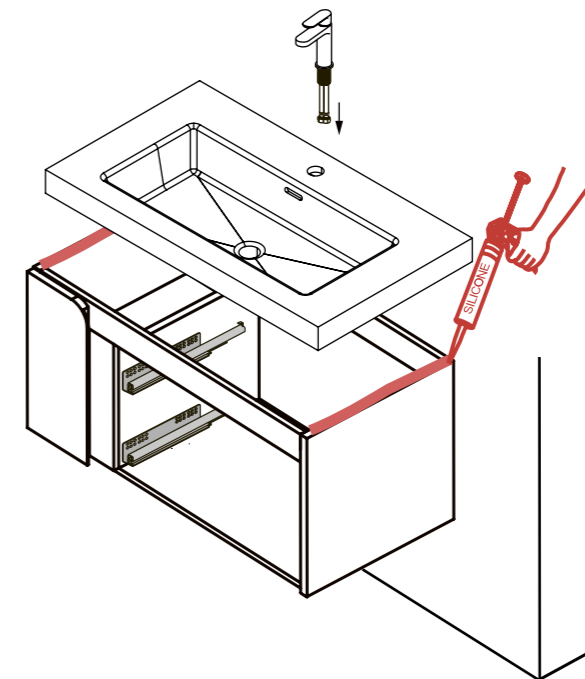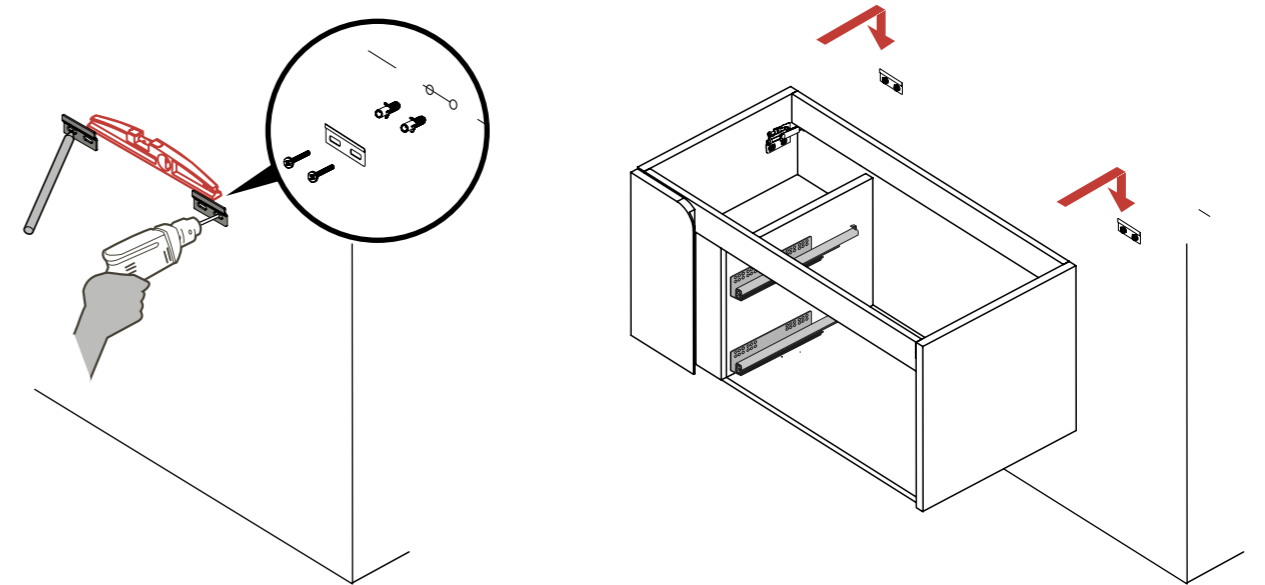

# FROME

COUNTERTOP BASIN /  
LAVABO DE APOYO / LAVABO À POSER


FUTUR<sup>BATH</sup>

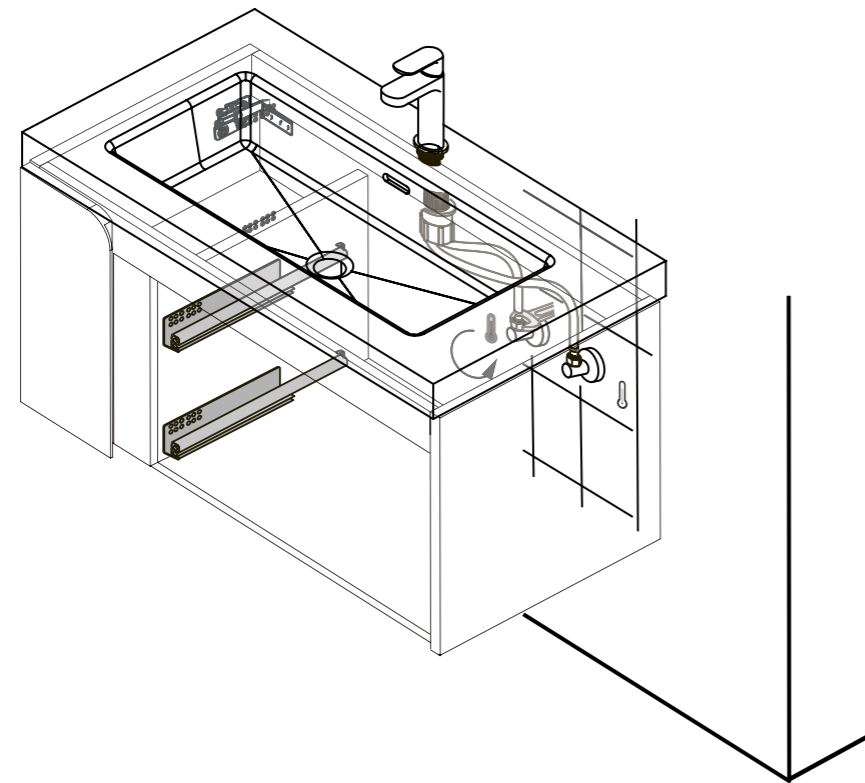

# FROME

COUNTERTOP BASIN /  
LAVABO DE APOYO / LAVABO À POSER

FUTUR<sup>BATH</sup>

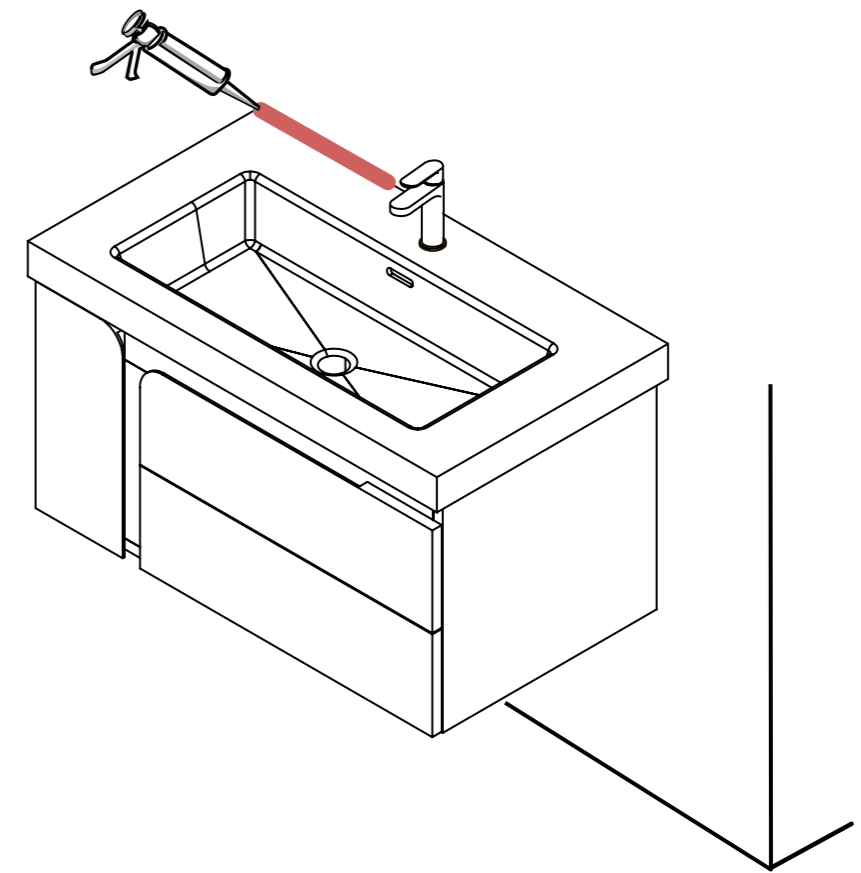

FUTUR BATH

[www.futurbath.com](http://www.futurbath.com)